SAMwin



SAMwin

1 Configuration of Innovaphone-PBX

innovaphone IP800

Configuration	General Interfaces VOIP Routes CDR0 CDR1 Calls
General	
IP	
ETH0	Address XXX.XXX.XXX
ETH1	Port 85
LDAP	Path /
TEL1	OK 1
TEL2	
TEL3	
TEL4	
PPP	
Administration	
РВХ	
Gateway	
Download	
Upload	
Diagnostics	
Reset	

Configure the Innovaphone-PBX to send CDR-Data in HTTP-Format to the Address where SAMwin.CAS Recorder is installed and set the Port and Path. NOTE: A Reset of the PBX is needed so that the change is activated.

innovaphone IP800

Configuration	Info /	Admin	License	Update	NTP	HTTP-Server
General		-	00 - 4 h - 46			
IP	Version	о О	.UU Sri-notti) n.90.33.06.0	(5 12800[07 £-3](65)	-60600.8	31], Bootcode(41.
ETH0	Coder	1	D Channels (of G.711.G.	726.G.72	29.G.723
ETH1	HDLC	1	D Channels		·	

This SerialNo is needed by SAMwin in the Configure-Step, to figure out from which Site the CDR-Data is coming.



2 Configuration of SAMwin CallAccounting

Create a Site with PBX Innovaphone. In the first Step you need to configure the Interfaces. Note: You only need to configure the Routes for incoming and internal (Multi-PBX)-Calls. All Patterns not found in this List are stored as outgoing calls. For Example: PRI1 to TEL1 = Incoming Call

Add new site					
SA The v	Mwin Site vizard will help you	Configure your SAMwin site step by step.			
Interface configurat	ion for incoming	and internal calls			
Source interface	Target interface	Status			
PRI1	TEL1	Incoming			
*					
	1				
In clipboard	From clipboa	ard Delete			
Enter the call routes as they are configured in your PBX.					
Caliste	an call roaces which	are not derined here will be handled as outgoing tails.			
		< Back Next Cancel			

In the second Step configure the Connection from SAMwin to the PBX. Use TCP/IP here.

<table-of-contents> Add new s</table-of-contents>	ite 🔀
	SAMwin Site Wizard The wizard will help you configure your SAMwin site step by step.
Choose the ty	pe of connection
C Serial inte Polling to Polling to LAN Box FTP DBA Multiste I Database TCP/IP	erface CRB the MPC500
	< Back Next Cancel



In the third Step enter the SerialNo. of the PBX in the Field "Server-ID" and the Port which you configured in the PBX in the Port-Field.

🕡 Add new s	ite		X
	SAMw The wizard	v in Site Wizard will help you configure your SAMwin site step by step.	
Enter the nets	vork param	eter	
Server-ID		xxx.xxx.xxx	
Port (same for a	ll sites)	85	
		< Back Next Cancel	

In the last Step you can choose to select "no CPND" or specify the Settings needed for SOAP-Access to the PBX. (Username and Password are the same as if accessing the PBX-Web interface).

Add new site		×
SAI	Mwin Site Wizard izard will help you configure your SAMwin site step by step.	
Select the type of CP C No CPND C Connection via TC	ND connection	
TCP/IP address Username Password	XXX.XXX.XXX admin *****	
Innovaphone Checkin: Innvaphone Checkout:	open blocked	
	< Back Next Cancel	

SAMwin

After this, the Configuration of SAMwin.CAS for Innovaphone is finished and you only need to start the SAMwin.CAS Recorder to listen for CDR's on the configured Port.